



XRESET Control
 SJ1 Control XRESET pin
 SJ2 Pullout 3.3V (Default)

If you want to control XRESET pin,
 Cut SJ2 and Connect SJ1.

I2C_LCD_breakout	
2013/07/09 15:21:54	
Sheet: 1/1	