


<電池交換方法 How to replace batteries>


① 台からアヒルを外し、ゴムカバーを取り外します。

Turn over the body of the duck and remove the rubber cover.

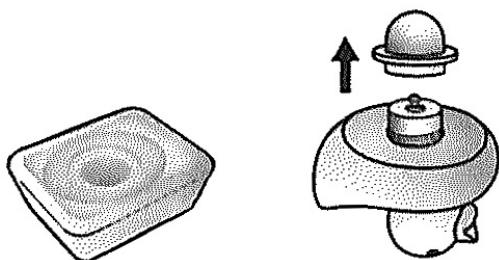


② アヒルを逆さまにし、底部分にあるスイッチカバーを反時計回りに回し、取り外します。

Rotate the switch cover on the base in a counter clockwise direction to detach.

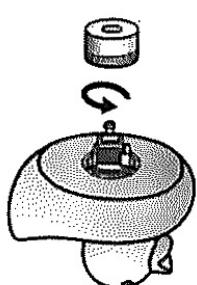


③ スイッチ部分をつまみ、ライトユニットを抜き取ります。

Hold the switch part and draw out the light unit.

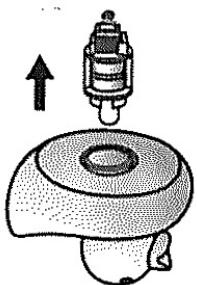

④ 使用済のLR41ボタン電池2個を取り外します。

Remove the two LR41 watch batteries.

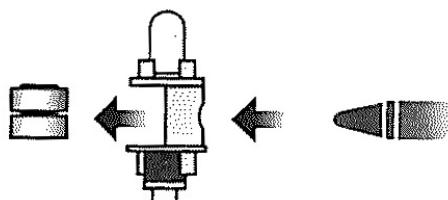


ここからボタン電池を押してください。
Press the watch batteries from here.

Press the watch batteries from here.

⑤ 消耗済みのボタン電池が取り出せたら、新しいLR41ボタン電池を2個ライトユニットに入れます。このとき、ボタン電池はー(マイナス)を上向きにして入れます。

After removing spent watch batteries, insert two new CR2032 batteries into the light unit with the – (Minus) side of the batteries facing upward.

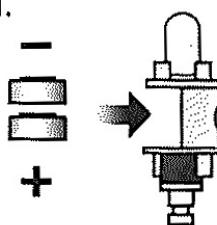

⑥ ボタン電池を入れたら、③②①の順でライトユニットを本体に戻して完了です。

After inserting the watch batteries, complete by returning the light unit to its original state by carrying out steps ③②① in reverse order.

※水が侵入する恐れがありますので、ゴムカバーは隙間無く最後まできちんと閉めてください。



※As there is a risk of water entering the unit, close the cover firmly to ensure that there are no gaps.

<注意>

電池交換の際は、濡れた手等での作業はおやめください。必ず手をよく乾かしてください。また、浴室や、水気の多い場所での電池交換もおやめください。

<Caution>

Do not replace batteries when your hands are wet, etc. Always be sure to thoroughly dry your hands before replacing batteries, and do not carry out this work in damp places such as inside bathrooms.